

**TRUCKMATE MEANS  
“ALL BUMPERS FOR ALL TRUCKS”**

America's #1 source for heavy truck bumpers  
is also your source for Rear Bumpers, Custom  
Bumpers, Grilles and Turbowings.



**DON'T SEE THE BUMPER YOU  
NEED IN THE CATALOG?**

**NO PROBLEM . . .**

We will build it in the style

And with the light

And text cutouts you want.

Check out our custom build

Sheet in the back of this

Catalog and let us build you

Exactly what you want . . .

Built to order and sure to please!

# GRILLES

## Grilles/Surrounds/Trims

### PETERBILT

all years  
330  
377  
378  
379  
385

### VOLVO

VNL generation 1  
VNL generation 2  
WIA 1986-1997

### Mack

1988 - later  
CH  
Vision

### Freightliner

60 70 80 1996-later  
Cascadia 2008-later  
Century 1996-2000  
Century 2005-later  
Classic 120 1997-later  
Classic 132 1997-later  
Columbia 2001-later  
Coronado SD 2006-later  
FLD 112 1995-later  
FLD 112 SD 1998-later  
M2 106 2005-later  
M2 112 2004-later

### International (bold)

4900 all years  
9200/9400 1987-97  
9200/9400 1997-later  
9300 1984-later  
9900I all years  
Prostar all years

### Kenworth

all years  
T-300  
T-600  
T-800  
W900A  
W900B  
W900L

### Hino

238  
258  
268  
338


### GMC

2003-later  
6500.7500/8500

### Ford


F600 1994-2000  
F650 2000-03

**3012**




Model T660

**3013**




T270, T370 Setback Axle, Also Fits T-300 2008 & Newer

**3014**




T-440 Setback Axle

**3017**




Model T300, Fits up to 2008

**3018**




T800 2004 & Newer w/Bolt On Tow. Also Fits T-880

**3018NL**




T800 2004 & Newer w/Bolt On Tow. Also Fits T-880

**3019**




Model T400

**3023**




T600 Chrome

**3024**




W900L Model Conv. Also Fits B Model Up to 2010

**3024NL**




W900L Model Conv. Also Fits B Model Up to 2010

**3027**




Conv. B or L Model 18" Ultramax. Also Fits B Model Up to 2010

**3027WL**




Conv. B or L Model 18" Ultramax. Also Fits B Model Up to 2010

**30270V**




Conv. B or L Model 18" Ultramax w/Oval Cutout. Also Fits B Model Up to 2010

**3027RD**




Conv. B or L Model 18" Ultramax w/Round Cutout. Also Fits B Model Up to 2010

**3028**




Conv. T-800 Setback Axle. Fits Most Models 1988 to 2003

**3028NL**




Conv. T-800 Setback Axle. Fits Most Models 1988 to 2003

**3217**

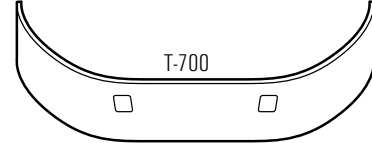


T-700

**3324NL**




2011 & Newer W900B

**3327**




2011 & Newer Conv W900B  
(For 33 w/Rectangular Fog Light Holes, Order 3327WL)

**30680**




Conv. Model T680 Setback Axle

**302825**




T800 - 2004 & Newer - No Fog Holes

**302825WL**




T800 - 2004 & Newer

**302826**



T800 - 2004 & Newer - Tapered Ends


**302826WL**



T800 - 2004 & Newer - Tapered Ends with Fog Holes




**3032**




Conv. Model 379/357 18" Ultramax 378

**3320**




Model 320

**3032WL**




Conv. Model 379/357 18" Ultramax 378

**3330**




330 Set Forward

**30320V**




Conv. Model 379/357 18" Ultramax w/Oval Cutouts 378

**3332**



Conv. Model 389 & 388 18" Ultramax - '07 & Newer  
Also Fits 367 Forward Axle & 388. Also Fits 365 & 567 Setforward Axle.

**3032RD**




Conv. Model 379/357 18" Ultramax w/Round Cutouts 378

**3333**




Conv. Model 389 & 388 - '07 & Newer  
Also Fits 367 Forward Axle & 388. Also Fits 365 & 567 Setforward Axle.

**3033**




Conv. Model 379/357/378 Foreward Axle

**3334**




Conv. Model 389 & 388 - '07 & Newer  
Also Fits 367 Forward Axle & 388

**3034**




Conv. Model 379/357/378 Foreward Axle

**3335**




Conv. Model 335 with Brackets

**3036**



Conv. Model 359 COE Model 352

**3337**




2015 & Newer 337

**3037**




Conv. Model 359 18" Ultramax

**3348**

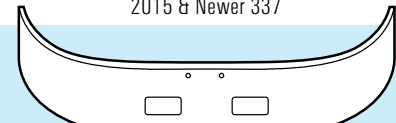


348 Setforward Axle

**3038C**




Conv. Model 377SBFA - Check Measurements • 1996 & Older

**3367**

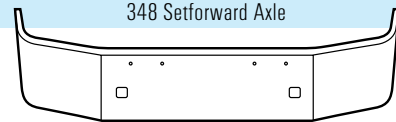


'07 & Newer 367 Setback Axle • Brackets & Diamond Plate Not Inc  
Also Fits Some Model 365

**3038CL**




Conv. Model 377SBFA - Check Measurements • 1996 & Older

**3384**

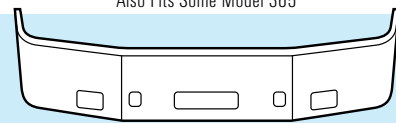


Model 384

**3038FAE**




Conv. Model 377SBFA Forward Axle - Check Measurements. 1997 & Newer

**3385**

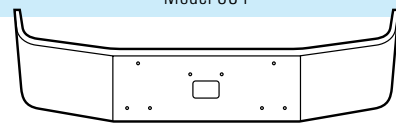


Conv. Model 385 Setback

**3038CA**



Model 377 Setback Axle - Check Measurements • '97 & Newer


**3386**

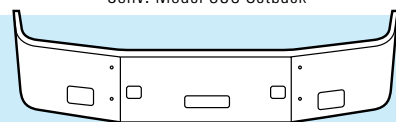

Conv. Model 386 with brackets. Fits 2008 & Newer




**3387**

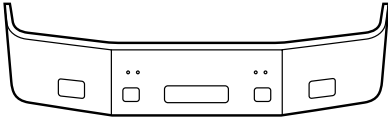


Model 387 Setback thru 2001 with brackets

**3587**

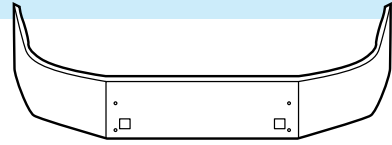


Conv. Model 587 Setback Axle

**3387A**




Conv. Model 387 2002 & newer with brackets

**73334**




365, 367, 388, 389 w/External Tow

**3579**

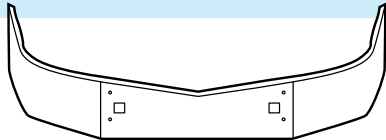

Model 579 Setback Axle


**73335**

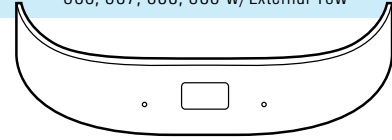

Fits Some 335 & 340




**3043  
w/3043EXT**

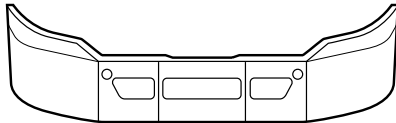


Cascadia 14" Tall with Brackets & Top Extensions. Only Replaces Plastic or Poly Bumpers

**3051NS**




FLD 120 SBFA Full Wrap 16" with brackets

**3044**




Coronado Custom Style - Does not include bumper grille

**3051NSNL**




FLD 120 SBFA Full Wrap 16" with brackets

**3046**




Fits 2003-2007 Columbia & 2005-2007 Century

**3051X**




FLD 120 SBFA Full Wrap 13" Tall with Brackets

**3048**




Century Class Up to 2004

**3055**




Classic 1984 & Later

**3049**




FL60-70-80

**3055NL**




Classic 1984 & Later

**3049A**

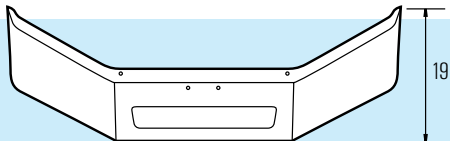


2003 & Newer - Business Class

**3057**




Classic 1984 & Later 18"

**3051**



FLD 120 SBFA Partial Wrap 12" w/13" Offset

**30570V**




Classic 1984 & Later 18" Classic w/Oval Cutouts

See previous page for additional Freightliner models.




**3057RD**




Classic 1984 & Later 18" Classic w/Round Cutout

**3057WL**




Classic 1984 & Later 18"

**3443WL**

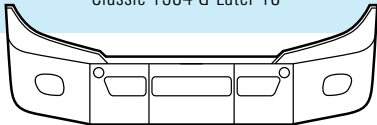


Cascadia 2008 & Newer Chrome Bumper to Replace Factory Stainless Clad Bumper. For This Bumper Without Fog Light Holes Order Part #3443

**3444**




2010 and Newer Coronado. Does NOT Fit SD (Severe Duty)

**3445**




Fits 2010 & newer Coronado SD. Only Available in 12 Inch

**3446**

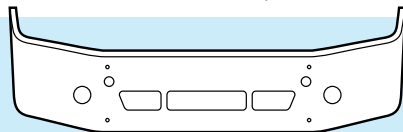


18" Tall '08 & Newer Columbia. If Replacing Alum., See #3446A

**3446A**

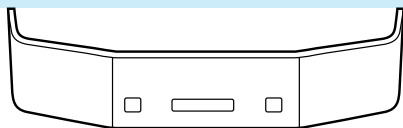


2008 & Newer Columbia. Only Replaces Aluminum Bumper

**3448**

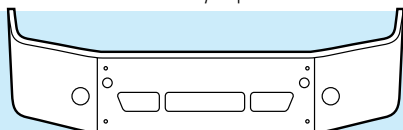


18" Tall 2008 & Newer Century Class

**3449**

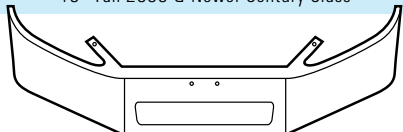


2004-2012 Business Class M2 112 (Midrange)

**3449A**

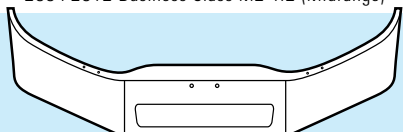


2011 & Newer Business Class M2 106 (Midrange) (Brackets Included)

**3451**




2012 & Newer 114 SD (Severe Duty)

**3555**




Conv. Model XL-6 Bolt - New Style - 04 & Newer Classic, Day Cab

**3555NL**




Conv. Model XL-6 Bolt - New Style - 04 & Newer Classic, Day Cab

**3557**




Conv. XL New Style 6 Bolt 18" Day Cab Classic 2004-2007

**3557WL**




Conv. XL New Style 6 Bolt 18" Day Cab Classic 2004-2007

**3558**




Conv. Model XL 2008 & Newer Classic

**3558NL**




Conv. Model XL 2008 & Newer Classic

**3758**




Conv. Model XL 2008 & Newer 18" Classic

**3758WL**




Conv. Model XL 2008 & Newer 18" Classic

**3755**




Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

**3755NL**




Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

**3757**



Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

**3757WL**



Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab


# INTERNATIONAL NAVISTAR

**3081**




4200-4300 - 2002 and Newer. Fits Some 8600

**3092**



Conv. Model 9370 18" Ultramax

**3082**




9900 I & IX 2000 & Newer Factory Style.  
For 3082 bumper without fog light holes order #3082NL

**3092WL**




Conv. Model 9370 18" Ultramax

**3083**




9900 I & IX 2000 & Newer Ultramax.  
For 3083 bumper without fog light holes order #3083NL

**30920V**




Conv. Model 9370 18" Ultramax w/Oval Cutouts

**3086**




46-47-4900 & 8100 Series (Also Available Painted Black - 3086P)

**3092RD**



Conv. Model 9370 18" Ultramax w/Round Cutouts

**3087**



Call for Measured Drawing


5000-5900 Series

**3094NL**




92/9400 Series Conv 1996 & Older Model

**3088**




S-Model 2200-2500

**3096**

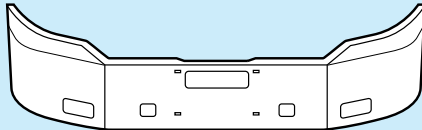


2008 to 2011 Prostar 3-Pc Bumper, brackets included. Does NOT Tilt.

**3089**




S-Model 1600-1900

**3097**




7300, 7400, 7500, 7600, 7700 Full Wrap  
Set Back Axle

**3090**




Conv. Model 9370

**3098**

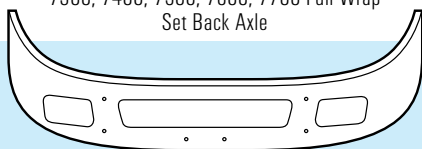


7300, 7400, 7500, 7600, 7700 Standard Wrap. Set Forward Axle.  
See part #3097 for outside shape variation

**3090NL**



Conv. Model 9370

**73088**



Fits Most 2574, 2674


**3091**



Conv. Model 9100, 9200 & 9400 Series 97 & Newer




**3116**

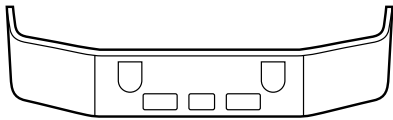


92 & Older CH Mack Setback Axle

**3124**




New Style R&RD Series  
For bumper with round fog light holes, order #3123

**3116B**




93 & Newer CH Mack Setback Axle

**3126**




R600/R700 82-1/2 to Present

**3116CHN**




CHN Set Forward Axle 2004-2007

**3128SP**




RD688S/RD6900S Setback  
Also Fits Some Granite & DM Series

**3116FA**




CH Mack Set Forward Axle Up to '03

**3129SP**




RD688 Setback - Also Fits Some Granite, CV Series,  
and RS690S

**3116CHUWL**




2008 & Newer CHU Set Forward Axle  
(Without fog light holes order #3116CHU)

**3229**



Newer GU/CTP 713 Mack 1 Tow. Also Fits Some Granites

**3116CXUWL**




2008 & Newer CXU Setback Axle  
(Without Light Holes order 3116CXU)

**3229SP**




Newer GU/CTP 713 Mack 2 Tows

**3117WL**

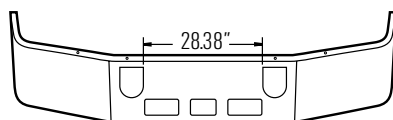


CX-Vision Up to 2005 (Without Light Holes Order #3117)

**73128SP**




MR MD Series

**3118WL**




'05 & Up CX-N and '07 & Up CX-P  
(Without Light Holes Order #3118)

**8080**

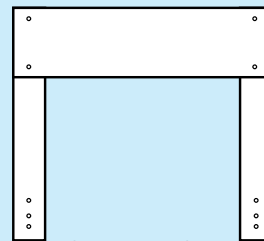


Chrome Mack Grill  
Guard. Fits R Model, Some  
Granite, and Some CV Series

**8081**

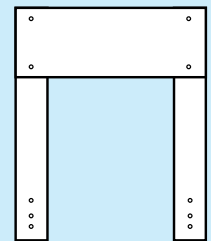

Fits Most CTP, GU, and  
Some CV and Granite Models

**3119**



CL Series with 1 Tow Hole

**31192**




CL Series with 2 Tow Holes






**3101**




Conv. Model LN, LT, LTN, LTL, 800, 8000, 900, 9000  
For Bumper with Round Fog Hole Lights Order #3100

**3108**




LTS & LTA Setback Aeromax

**3103**




F600, 700, 800 • Fits Up to '03

**31650**

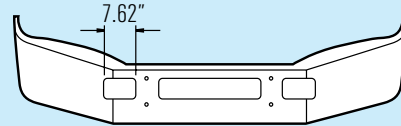

Ford F650, Check Tow Hole Size Before Ordering


**3107**



Conv. Model LN, LT, LTN, LTL, 800,  
8000, 900, 9000 18" Ultramax


## VOLVO

**3062**

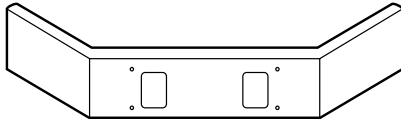


Volvo Forward Axle WG w/Bolts in Face

**3062VNL**




VNL Conv. 12" Tall Full Wrap w/Brackets

**3062NS**

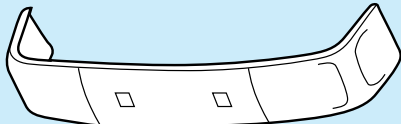

WIA & WCA Conv. Full Wrap w/Brackets

**3662**




Volvo VNL Generation 2, 2004 to 2011

**3062VNM**




VNM64T Setback Axle - 2003 & Earlier

**3665**




VN and VNL Series 2012 & Newer with Fog Light Brackets

**3062  
VNMG2**




VNM - Most 2004 and Newer (Check Pattern)

**3667**

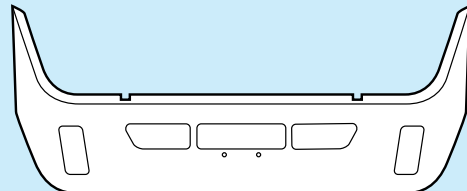

Model VT830 Set Back Axle - 18" Tall with Brackets

**3062VN**



VN Conv. 16" Tall Full Wrap w/Brackets

**3062WG**




WG Conv. Full Wrap w/Brackets - Fits most thru 2003

# WESTERN STAR


Call for Measured Drawings on Setback Axle Western Star Bumpers

**3064**




Cornerstone 89 & Newer 18" Ultramax

**3069**




Cornerstone 89 & Newer

**3067**




'08 & Newer 4900EX

**3069NL**



Cornerstone 89 & Newer


**3068**



2008 & Newer 4900EX (For Bumper with Fog Light Holes Order #3068WL)

Call for Measured Print on All Setback Axles


# HINO

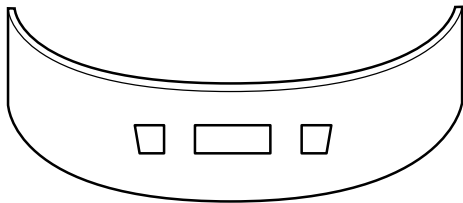

Fits Conventional models; 238, 258ALP, 258LP, 268, 268A, 338


# GMC

**3130**

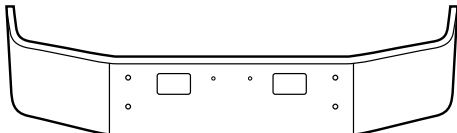


Fits Most 2004 & Newer GMC 6500, 7500

**3136NS**



New Style Top Kick/Kodiak (1990-2003)


**3132**

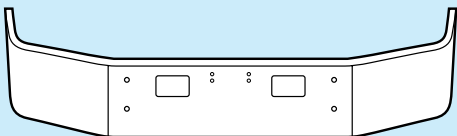

C4500-C5500 - 2004-2006


# STERLING

3104




Conventional Set Forward Axle

3109

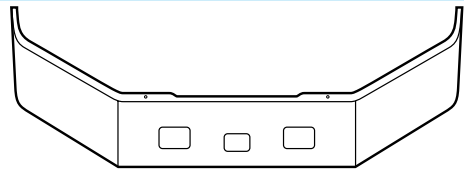


Acterra A/T Series

3106




LT-7501

39500

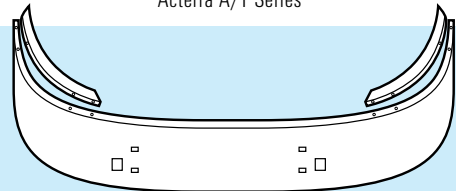

AT9500 Sterling 3-Pc Bumper

3108LT

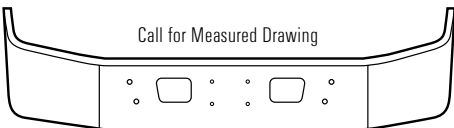


LT-9500 SBFA and some LT-8500 SBFA

# BLANKS



Blank, No Cutouts  
3145

















Blank, No Cutouts 18" Ultramax  
3147

# CUSTOM BUMPERS

## OUTSIDE SHAPES




## SELECT FROM THESE CUSTOM OPTIONS OR CREATE YOUR OWN.




## UNIVERSAL HIDDEN MOUNTING BUMPER STYLES

3147UST




20" Boxed Ends with Hidden Mounting Brackets

3147CUST




20" Boxed Ends with Deep Contour Ends & Hidden Mounting Brackets

3147USTR25



20" Boxed Ends with Hidden Mounting Brackets with Round Holes

3147CUSTR25



20" Boxed Ends with Deep Contour Ends & Hidden Mounting Brackets with Round Holes

### HIDDEN MOUNTING BRACKET APPLICATION

Bumpers with hidden mounting brackets include brackets that will allow bumper to mount to:

Peterbilt - Models 379 and 359 • Kenworth - Models W900L, W900B and W900A

Freightliner - Classic XL 8-Bolt Mounts from 1982 thru 2003